

MP3 PLAYER

Mitis

TABLE OF CONTENTS

Operating precautions and maintenance recommendations.....	4
QUICK PRESENTATION	6
OPERATING INSTRUCTIONS	11
Music mode	11
Photos mode	12
Video mode	12
Radio mode	12
Ebook mode	13
Recordings mode	14
Browser mode	14
Settings mode	15
Specifications	17

Please read this manual carefully before using this device and keep it for future reference. This manual is intended to help you benefit fully from the MP3's exceptional functions and make its use even more enjoyable.

This manual contains important safety instructions and information concerning the device's proper use. Make sure to carefully read all the instructions to avoid accident.

We hereby reject any and all liability for errors, omissions or updates in this document. In addition, we reject all liability for any loss of data stored on the device.

Windows Media Player and Windows are trademarks of Microsoft Corporation.

Other trademarks and trade names mentioned in this manual are the property of their respective owners.

Operating precautions and maintenance recommendations

- Do not expose the player to high temperatures, high humidity or very dusty environments.
- Do not expose the device to extreme temperatures (above 40 °C), especially in cars with the windows rolled up in summer.
- Do not drop the device or do not subject it to impacts; in particular, to prevent damage and display anomalies do not shake the TFT screen.
- Listen at an appropriate volume level; lower the sound or stop listening if you experience ringing in your ears.
- Battery life depends on the conditions of use, the manufacturer and the date of manufacture.
- Do not disconnect the device during memory formatting or file transfer operations. Doing so may cause a program failure.
- We hereby reject any and all liability for loss of memory due to damage to the product, repair or other reason. The device must be operated correctly as described in the manual.
- Once connected to a USB port of a computer in operation, the device may be recharged, regardless of whether it is turned on or off.
- Do not disassemble the device yourself and do not use alcohol, thinner or benzene to clean the surface of your player.
- Do not place sources of naked flames, such as burning candles, on the product.
- This product is designed for use in temperate climates.
- Ensure that the device's ventilation is not impaired by newspapers, tablecloths, curtains or any other objects obstructing the ventilation slits.
- When using the MP3 player, be careful not to turn the volume up too high as doing so may damage your hearing.
- Do not use the headphones when driving a vehicle or riding a bicycle.
- You may create an accident if the volume is excessively high while walking in the street.

Caution:



Prolonged headphone listening at high volumes could lead to hearing damage.

Do not listen to music at excessively high volume; health authorities warn against prolonged exposure to high volumes.

Stop using the device or lower the volume if you experience ringing in the ears.

Only the accessories supplied or approved by our company should be used with your device. Do not spray water on the player.

- Recharge the device in the following conditions:
 - A. The battery charge icon indicates that it is dead.
 - B. When the player stops automatically. It may be possible to turn it back on but it turns off again very quickly.
 - C. The device does not react when the buttons are pressed.

CAUTION




1. There is an explosion hazard if the battery pack is not replaced correctly. Only use batteries of the same or equivalent types.
2. Never disassemble, crush, by-pass or incinerate the battery. Doing so may result in a risk of fire, bodily injury, burns, etc.

IMPORTANT:

When replacing used batteries, always dispose of them in accordance with applicable regulations. Take them to an approved disposal point so that they are recycled in an environmentally-friendly way.

QUICK PRESENTATION

Presentation of the LCD interface

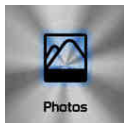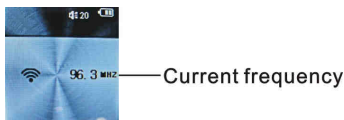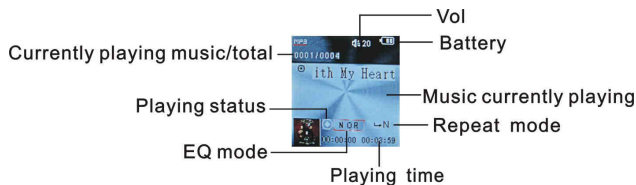


QUICK PRESENTATION


On/Off

To turn on the player: Push the **On/Off/Hold** button to up way , the player comes on
After turn on the player, Push the **On/Off/Hold** button to up way again to locks the buttons.
To turn off the player: Push and hold the **On/Off/Hold** button until the player turns off.

If the player can't use naturally, press **Reset** button can turn on it.

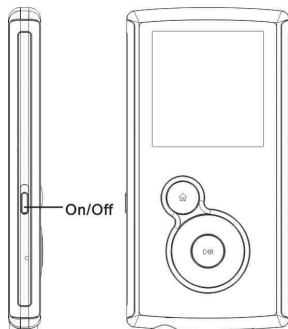

To connect the earphones, insert the plug into the jack as shown.

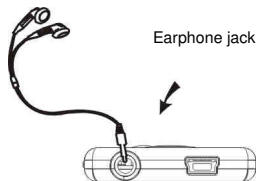

ACCESSORIES:

Accessories included



Earphones



Driver CD




USB cable



User's manual


Buttons

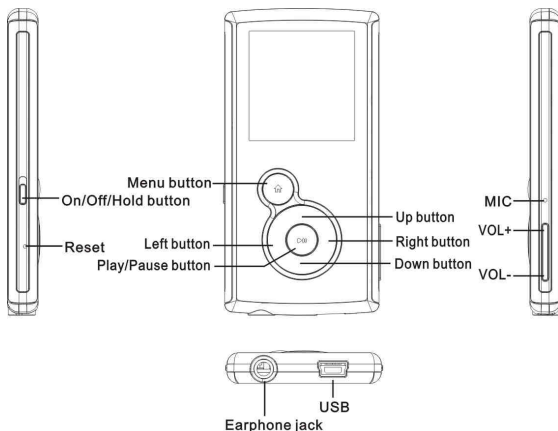

CONNECTIONS

Connecting to a PC

Connect the USB cable to the PC as shown in the illustration below.

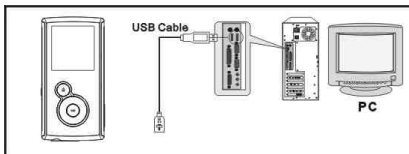

Once the device is connected to the PC, the LCD screen displays the following image.



Standard MSC
connection mode

Mains adapter use (optional)

1. Plug the adapter cord into the player jack then plug the adapter into a 100-240V - 50/60Hz wall outlet. Check the voltage of your installation prior to use.
3. The "Battery" indicator light flashes while the battery is being charged.
4. The "Battery" indicator light stops flashing when the battery is fully charged.



Adapter

Type: FTD-06PS-5.0V

Input: 100-240V~ 50/60Hz, 0.2A

Output Voltage: 5V --- 250mA

- Only use the mains adapter supplied with your device (FTD-06PS-5.0V). Contact our after-sales service department if the adapter no longer works.
- Only the additional features and/or accessories designated by the manufacturer should be used.
- If the device is to remain unused for an extended period of time, it should be unplugged from the mains outlet.
- Elements containing water, such as a vase for example, should not be placed on the device.
- To disconnect your device, unplug the mains adapter from the outlet. The power outlet must be located near the device and be easily accessible.
- Do not place sources of naked flames, such as burning candles, on the product.
- For indoor use only.

OPERATING INSTRUCTIONS

Music mode

1. Turn on the player.
2. Press **▶||** button to enter the Music mode.
3. Press **▶||** to start playing music files.
4. During playback:
 - 4.1 Press the **Left / Right** buttons to select the previous/next music file.
 - 4.2 Press and hold the **Left / Right** buttons for fast backward/fast forward.
 - 4.3 Press the **▶||** button to momentarily pause playback; press and hold this button to stop playback completely.
 - 4.4 Press the **VOL- / VOL+** buttons to lower/raise the volume.
5. Music file playback menu options: press the **menu** button to enter the playback submenu.
 - 5.1 Repeat Mode: No repeat, Repeat One, Repeat All, Random All, Dir Normal, Dir All Repeat, Dir Random All
 - 5.2 Equalizer: ormal, Rock, Jazz, Classic, Pop, and Bass
 - 5.3 File Browse: The user can save files in a pre-existing folder. To do this, the folder must first be created using a PC.

Music mode:
Press the **menu** button to enter the submenu, then use the **Up / Down** buttons to select the files.
Press **▶||** to confirm.
 - 5.4 Classification: refresh: USE **Left / Right** buttons to select Yes or No.

Press the **Up / Down** buttons to select an option in the menu.

Press **▶||** to confirm your selection.

Press the **menu** button again to return to the playback interface.

Photos mode

1. Use the **Up / Down** buttons to select "Photos",
2. Press **▶||** button to switch to Photos mode.
3. Use the **Up / Down** buttons to select the previous/next photo, then press **▶||** to display the photo.
4. Press and hold the **menu** button to exit the Photos mode.

Video mode

1. Use the **Up / Down** buttons to select " Video ",
2. Press **▶||** button to switch to Video mode.
3. Use the **Up / Down** buttons to select the previous/next video file, then press **▶||** to playing.
4. Press and hold the **menu** button to exit the Video mode.
5. During playback:
 - 5.1 Press the **Left / Right** buttons to select the previous/next video file.
 - 5.2 Press and hold the **Left / Right** buttons for fast backward/fast forward.
 - 5.3 Press the **▶||** button to momentarily pause playback.
 - 5.4 Press the **VOL- / VOL+** buttons to lower/raise the volume.

Radio mode

1. Use the **Up / Down** buttons to select " Radio ",
2. Press **▶||** button to switch to Radio mode.
3. Manual station browsing:

Use the **Left / Right** buttons to browse the frequency band from 87.5 to 108 MHz in either forward or reverse. Press and hold the **Left / Right** buttons to switch to automatic browse mode until you have found the desired station.
4. Press the **menu** button, then the **Up / Down** buttons, so that you can select

between Save Station, Del Station and Auto Scan.

5. To store the station sought in memory:
Press **menu** to enter the FM submenu; select Save Station, then briefly press the **menu** button to confirm. Save supporting up to 30 stations for each band.
6. Auto search: press **menu** to enter and start to search, if searched some channel, will be saved automatically. The system will update the station list after the auto search and play the first station in the list.
7. Selective listening of stored stations: if several stations have been saved in memory, you can listen to them by pressing the **▶▶** button.
Press the **▶▶** button again to return to the playback interface
8. Delete station: if several stations have been saved in memory, you can press **menu** button to enter the submenu, then press the **Up** / **Down** buttons to select Del Station, and press the **menu** button to confirm.
9. FM radio record function:
Your favourite programmes can be recorded while listening to them. Press **Down** button to recording : the programme being broadcasted can be saved in a record file. Press the **menu** button to deactivate the record function and save it.
During the operation, the **▶▶** button can be pressed to pause recording.
10. Press the **VOL-** / **VOL+** buttons to lower/raise the volume.
11. Press and hold the **menu** button to exit the Radio mode.

Ebook mode

1. Use the **Up** / **Down** buttons to select "Ebook",
2. Press **▶▶** button to switch to Ebook mode.
3. Use the **Up** / **Dow** buttons to select the previous/next TXT file.
5. Press **▶▶** to open the file and access its contents.
6. Use **Up** / **Right or Dow** / **Left** / to move forward or backward in the file contents.
7. Press and hold the **menu** button to exit the Ebook mode.

Recordings mode

1. Use the **Up / Down** buttons to select "Recordings",
4. Press **▶||** to enter the record playback mode.
5. Press **▶||** to read the recorded file.
6. Press and hold the **menu** button to exit the record mode.

In playback mode:

1. Use the **Left / Right** buttons to select the previous/next recording.
2. Press and hold the **Left / Right** buttons to play the voice recording at twice the normal playback rate or in reverse.
3. Press **▶||** to pause/stop playback. press and hold this button to stop playback completely.
4. Press the **VOL- / VOL+** buttons to lower/raise the volume.

Voice recording playback submenu options:

Repeat mode: (see the music file playback mode)

Equalizer: (see the music file playback mode)

File Browse: (see the music file playback mode)

Browser mode

1. Use the **Up / Down** buttons to select "Browser",
2. Press **▶||** button to switch to Browser mode.
3. File deletion: Use the **Up / Dow** buttons to select the revious/next file, then press **VOL-** button to show a dialog box, Press the **Left / Right** buttons to select the Yes or No.
4. Press and hold the **menu** button to exit the Browser mode.

Settings mode

1. Use the **Up / Down** buttons to select "Settings",
2. Press **▶||** button to enter to Settings mode.
3. Press and hold the **menu** button to exit the mode.

System setup options:

1. Power
2. Language
3. Display Setting
4. Record Setting
5. System Tools

1. Power: Auto Off: 15 Minutes, 30 Minutes, 60 Minutes, 90 Minutes, 120 Minutes, Close.
Always On In Playback. No, Yes.
2. Language selection: Arabic, Chinese(Trad), Czech ,Chinese(Simp), Danish, Dutch, English, Finnish, French, German, Greek, Hebrew, Hungarian, Italian, Japanese, Korean, Norwegian, Polish, Portuguese, Russia, Spanish, Swedish, Thai, Turkish, Ukrainian
3. Display setup:
 - 3.1. Brightness: Low, Medium, High, Maximum.
 - 3.2. Blacklight: defines the time after which the screen goes black (15 Seconds –1munite/close).
4. Record mode:
Record Quality:
Long Time, Normal Quality, High Quality.
Record Format:
ADPCM, MP3, WMA.
VAD:
Off, On
AGC:

Off, On

5. System tools:

Delete

Format:Quick, Complete

Reset

System Info

Press the **Up** / **Down** buttons to select the file.

Press the **▶||** button to affirm .

Recycling

This symbol bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment.

For further information, please contact your local or regional authorities.

Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

